



## Epson Glossy - 102 x 152 mm

200 g/m<sup>2</sup> - 100 sheet(s) photo paper - for EcoTank ET-2750 - 2751 - 4750; SureColor P706; WorkForce WF-7845; WorkForce Pro WF-3725

Group	Print Media
Manufacturer	Epson
Manufacturer item no.	C13S042548
EAN/UPC	8715946529509

### Description

Suitable for all inkjet printers, Photo Paper Glossy expands our current range of Epson photo papers. It has been designed for the whole family to use and offers great value-for-money and ease-of-use. Photo Paper Glossy is 200gsm and comes in four different sizes. Each pack contains either 20, 50 or 100 sheets.

This three star rated photo paper is ideal for everyday home printing and is available in 10 x 15cm, 13 x 8cm, A3/A3+ and A4 sizes.

### Main features

Product Description	Epson - photo paper - glossy - 100 sheet(s) - 102 x 152 mm - 200 g/m <sup>2</sup>
Product Type	Photo paper
Surface Finish	Glossy
Media Size	102 x 152 mm
Printing Technology	Ink-jet
Media Weight	200 g/m <sup>2</sup>
Included Qty	100 sheet(s)
Compatible with	EcoTank ET-1110, 2750, 2751, 2756, 3750, 4750, 7700, 7750; Expression ET-2710; Expression Home XP-235, 240; Expression Home HD XP-15000; Expression Photo HD XP-15000; Expression Premium XP-540, 6000, 6005, 900; SureColor P706; WorkForce ET-4700, WF-2810, 7720, 7725, 7845; WorkForce Pro WF-3725, 4745

### Extended details

Media	
Media Type	Photo paper
Surface Finish	Glossy
Media Sizes	102 x 152 mm
Printing Technology	Ink-jet
Included Qty	100 sheet(s)

Media Weight

200 g/m<sup>2</sup>

---

## Compatibility Information

Compatible with

Epson L385, L565 | Epson Artisan 1430, 635, 725, 730, 837 | Epson EcoTank ET-1110, ET-2750U, ET-2751, ET-2756, ET-3750, ET-4750, ET-4750 Unlimited, ET-4750U, ET-7700, ET-7750 | Epson Expression ET-2710 | Epson Expression Home XP-100, XP-200, XP-202, XP-205, XP-212, XP-215, XP-220, XP-225, XP-235, XP-235A, XP-240, XP-245, XP-247, XP-314, XP-324, XP-342, XP-345, XP-400, XP-405, XP-410, XP-415, XP-422, XP-432, XP-435, XP-442, XP-445, XP-530 | Epson Expression Home HD XP-15000 | Epson Expression Photo HD XP-15000, XP-55, XP-860, XP-950 | Epson Expression Premium XP-530, XP-540, XP-540 Media Bundle, XP-600, XP-6000, XP-6005, XP-610, XP-615, XP-620, XP-630, XP-635, XP-640, XP-645, XP-700, XP-710, XP-810, XP-900, XP-900 Stickers | Epson PictureMate PM235 | Epson Stylus C110, C59, C90, CX3900, CX5500, CX6900F, CX7300, CX8300, CX9300F, N11, NX125, NX130, NX220, NX230 Small-in-One, NX420, NX430 Small-in-One, NX635, T20, T21, TX100, TX110, TX200, TX210, TX400, TX550W | Epson Stylus Office T1100, T30, T40W, TX300F, TX600FW, TX610FW | Epson Stylus Photo 1410, R1900, R2000, R2880, R290, R3000, R390, RX590, RX610, RX690, T50, TX650, TX700W, TX710W, TX800FW, TX810FW | Epson SureColor P706, SC-P405 | Epson WorkForce 320, 325, 435, 60, 633, 645, 7010, 7510, 7520, 840, 845, ET-4500 EcoTank, ET-4700, WF-100, WF-100W, WF-2010W, WF-2520, WF-2520NF, WF-2530, WF-2530WF, WF-2540, WF-2540WF, WF-2630, WF-2630WF, WF-2650DWF, WF-2660, WF-2660DWF, WF-2750DWF, WF-2760DWF, WF-2810, WF-3520, WF-3530, WF-3540, WF-3540DTWF, WF-3620DWF, WF-3620DWF Stickers, WF-3640, WF-3640DTWF, WF-7110DTW, WF-7610, WF-7610DWF, WF-7620, WF-7620DTWF, WF-7720, WF-7725, WF-7845 | Epson WorkForce Pro WF-3725, WF-4630, WF-4630DWF, WF-4640, WF-4640DTWF, WF-4745, WF-5190, WF-5190DW, WF-5690, WF-5690DWF, WF-R5190 DTW Flex, WF-R5190 DTW Flex BAM, WF-R5690 DTWF Flex BAM, WF-R5690DTWF Flex, WF-R8590 D3TWFC Flex, WF-R8590 DTWFC Flex, WF-R8590DTWF Flex, WP-4530, WP-4540, WP-4590

---