

# Ricoh Tray Exit D0464952

|                       |                      |
|-----------------------|----------------------|
| Group                 | Printing Accessories |
| Manufacturer          | Ricoh                |
| Manufacturer item no. | D0464952             |



## Description

Ricoh Tray Exit (D0464952)

## Extended details

|                   |                              |
|-------------------|------------------------------|
|                   | <b>General</b>               |
| Type              | Various Printing Accessories |
|                   | <b>Compatibility</b>         |
| Compatible brands | Ricoh                        |